



- PZ1, PZ2 Continuous tone (RS #273-074)
- PZ3 Pulsed tone (RS #273-066)
- B1 Auto-Reset Breaker, 10A
- S1 Key Switch, 1A
- S2,S4 Momentary Normally-open Switch, 100mA
- S3 Momentary Normally-open Switch, 0.25A
- S5 SPST Toggle Switch, 10A
- P1,J1 16/3 Orange Cord (Cut for connectors)
- P2 AA Battery Pack (or equivalent), 12V
- J2 Igniter Leads with strain relief
- J3 Battery Leads with strain relief
- K1 SPDT Automotive Relay, 30A
- R1,R2 470 Ohm Resistor
- R3,R4 1K Resistor

## Relay Launch Controller

### CONTROL BOX & PAD BOX

John S. DeMar  
john\_demar@hotmail.com

Rev 1.0  
12/9/2006